

Raven & Pumpkin Hanger



5x7 6x10 7x12

Sweet Pea
MACHINE EMBROIDERY



THREAD
COLOUR
CHART
INCLUDED

Raven and Pumpkin Hanger 5x7 6x10 7x12 Instructions

There is a colour chart provided for this design. Please see separate document within the files.

FABRIC REQUIREMENTS

5x7 (13cm x 18cm) Hoop

TOP PANEL

Fabric A - 18cm x 23cm (7"x 9") **background**

Fabric B - 14cm x 12cm (5.5" x 4.5") **raven** (Joins onto Fabric C on middle panel)

MIDDLE PANEL

Fabric A - 18cm x 23cm (7"x 9") **background**

Fabric B - 10cm x 15cm (4" x 6") **pumpkin** (Joins onto Fabric B on bottom panel)

Fabric C - 15cm x 14cm (6"x 5.5") **raven** (Joins onto Fabric B on top panel)

BOTTOM PANEL

Fabric A - 14cm x 23cm (5.5" x 9") **background**

Fabric B - 9cm x 15cm (3.5" x 6") **pumpkin** (Joins onto Fabric B on middle panel)

Fabric C – cut 2 x 6.5cm x 19cm (2.5" x 7.5") **border**

Batting – 18cm x 23cm (7"x 9") cut one for each panel

REST OF THE HANGER

Fabric D - 9cm x 30cm (3½" x 12") **hanging loops**

Fabric E - 30cm x 50cm (12"x 20") **backing** (cut later - measure your hanger first)

6x10 (16cm x 26cm) Hoop

TOP PANEL

Fabric A - 20cm x 30cm (8" x 12") **background**

Fabric B - 15cm x 15cm (6" x 6") **raven** (Joins onto Fabric C on middle panel)

MIDDLE PANEL

Fabric A - 20cm x 30cm (8" x 12") **background**

Fabric B - 10cm x 20cm (4" x 8") **pumpkin** (Joins onto Fabric B on bottom panel)

Fabric C - 18cm x 20cm (7"x 8") **raven** (Joins onto Fabric B on top panel)

BOTTOM PANEL

Fabric A - 18cm x 30cm (7" x 12") **background**

Fabric B - 10cm x 20cm (4" x 8") **pumpkin** (Joins onto Fabric B on middle panel)

Fabric C – cut 2 x 6.5cm x 25cm (2.5" x 10") **border**

Batting - 20cm x 30cm (8"x 12") cut one for each panel

REST OF THE HANGER

Fabric D - 9cm x 30cm (3½" x 12") **hanging loops**

Fabric E - 38cm x 59cm (15"x 23") **backing** (cut later - measure your hanger first)

7x12 (18cm x 30cm) Hoop

TOP PANEL

Fabric A - 23cm x 35cm (9"x 14") **background**

Fabric B - 18cm x 18cm (7" x 7") **raven** (Joins onto Fabric C on middle panel)

MIDDLE PANEL

Fabric A - 23cm x 35cm (9"x 14") **background**

Fabric B - 13cm x 23cm (5" x 9") **pumpkin** (Joins onto Fabric B on bottom panel)

Fabric C - 20cm x 23cm (8"x 9") **raven** (Joins onto Fabric B on top panel)

BOTTOM PANEL

Fabric A - 23cm x 35cm (9" x 14") **background**

Fabric B - 12cm x 23cm (4.5" x 9") **pumpkin** (Joins onto Fabric B on middle panel)

Fabric C – cut 2 x 9cm x 28cm (3.5" x 11") **border**

Batting - 23cm x 35cm (9"x 14") cut one for each panel

REST OF THE HANGER

Fabric D – 9cm x 30cm (3½" x 12") **hanging loops**

Fabric E – 43cm x 66cm (17"x 26") **backing**

Finished dimensions (approx.) with 3 panels:

5x7 – 20cm x 41cm (8" x 16")

6x10 – 28cm x 48cm (11"x 19")

7x12 – 33cm x 56cm (13" x 22")

NOTE: If you have decided to do this project with Leather, Faux Leather, Vinyl, Cork, PVC (clear plastic) or any combination of these, please refer to our guide with extra tips on how to use these materials here -

<https://swpea.com.au/blogs/machine-embroidery-blogs/tips-when-using-pu-leather-in-machine-embroidery>

Sweet Pea Machine Embroidery Designs Design Files Disclaimer-

Please note to customers who use embroidery software to open our files. In doing so, you may run the risk of the design not stitching as intended by our digitiser's instructions.

We highly recommend that any design file purchased from us be downloaded as per our "how to download our designs" instructions on our website, placed directly onto a USB/memory card, and then placed directly onto the embroidery machine.

We will not be obligated to compensate customers who have put our files through their software and the resulting stitch-out was not as intended.

INSTRUCTIONS

USING YOUR EMBROIDERY MACHINE:

For tips on how to correctly hoop your stabiliser, go to <https://swpea.com/blogs/machine-embroidery-blogs/tips-for-stabiliser-in-the-hoop>

TOP PANEL


Hoop up **cutaway stabiliser** in the hoop. Load the design onto your machine. Use applique scissors for trimming the batting and fabric.



STEP 1 Place **Batting** on top of the hoop. Stitch down. Remove the hoop from your machine and trim the batting about 1-2mm from the stitching.



STEP 2 Place **Fabric A** on top of the hoop covering the batting. Stitch down.

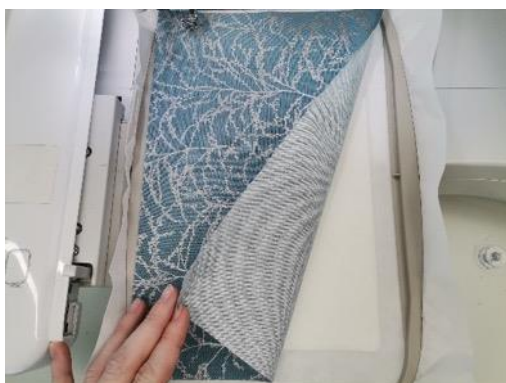

Remove the hoop from your machine and trim the fabric about 1-2mm from the stitching, leaving the fabric in the seams.



STEP 3 Embroider the rays in the background.



STEP 4 Stitch the placement line for the raven.



STEP 5 Place **Fabric B** on top of the hoop covering the placement line. Stitch down.



Remove the hoop from your machine and trim the fabric about 1-2mm from the stitching, leaving the fabric in the seam.



STEPS 6-12 Embroider the raven as per below diagram. (Colours are for diagram purpose only – please follow colour chart). All elements of the same colour are part of the same step.



STEPS 13 & 14 Embroider the moon, then the outline of the moon.




STEPS 15 & 16 Embroider the base colour of the stars, then the shading on the stars.



STEPS 17 & 18 Embroider the swirls then the outline of the swirls.



Remove from the hoop and trim the seams to about ½ an inch. Hold aside until all your panels are made.

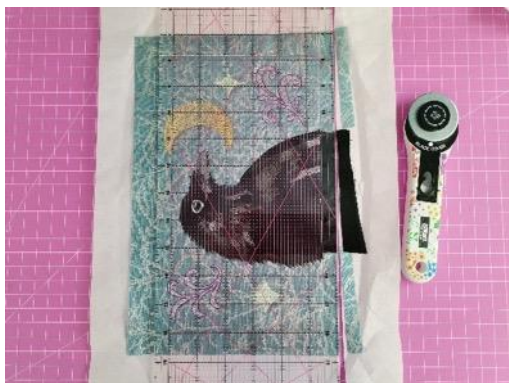

MIDDLE PANEL

Hoop up **cutaway stabiliser** in the hoop. Load the design onto your machine. Use applique scissors for trimming the batting and fabric.



STEP 1 Place **Batting** on top of the hoop. Stitch the batting down. Remove the hoop from your machine and trim the batting about 1-2mm from the stitching.



STEP 2 Place **Fabric A** on top of the hoop covering the batting. Stitch down.



Remove the hoop from your machine and trim the fabric about 1-2mm from the stitching, leaving the fabric in the seams.



OPTIONAL: STEP 3 Embroider the rays in the background.



STEPS 4 & 5 Repeat the applique process for the pumpkin using **Fabric B**. Trim, leaving the fabric in the seam.



STEPS 6-8 Embroider the shading on the pumpkin, then embroider the satin stitch around the pumpkin and then embroider the stalk.



OPTIONAL: STEP 9 Embroider the face on the pumpkin.




STEPS 10 & 11 Repeat the applique process for the raven using **Fabric C**. Trim, leaving the fabric in the seam.



STEP 12 Embroider the feet.



STEPS 13-17 Embroider the raven as per below diagram. (Colours are for diagram purpose only – please follow colour chart). All elements of the same colour are part of the same step.

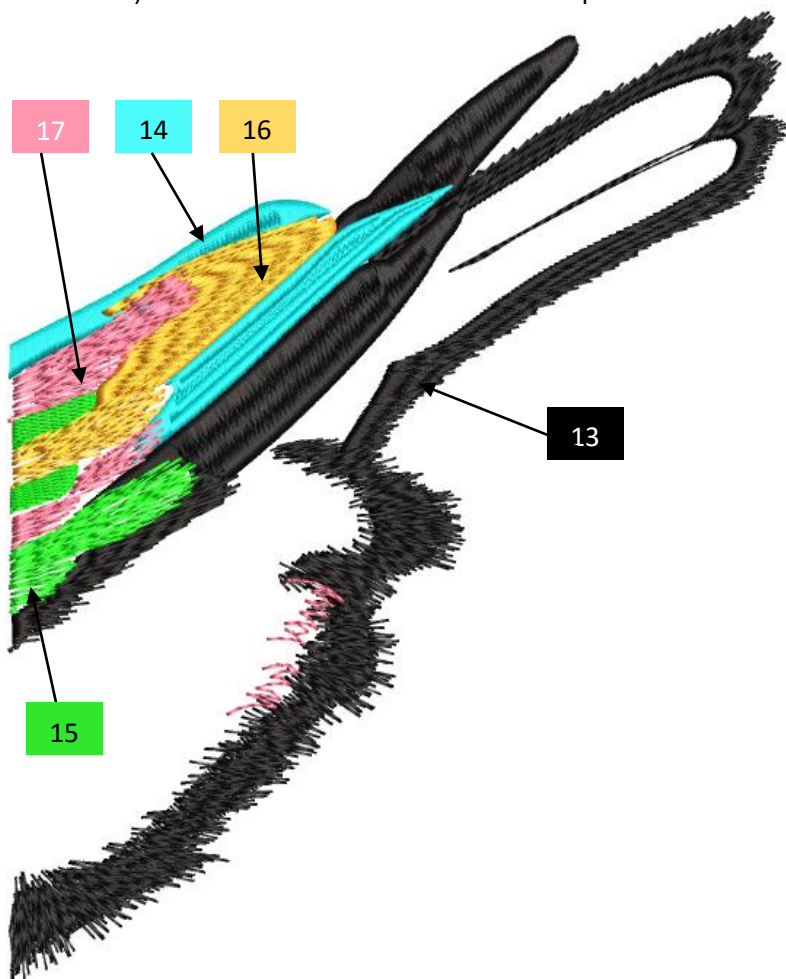

STEPS 18 & 19 Embroider the base colour of the stars, then the shading on the stars.



STEPS 20 & 21 Embroider the swirls then the outline of the swirls.




Remove from the hoop and trim the seams to about ½ an inch. Hold aside until all your blocks/panels are made.



BOTTOM PANEL

Hoop up **cutaway stabiliser** in the hoop. Load the design onto your machine. Use applique scissors for trimming the batting and fabric.

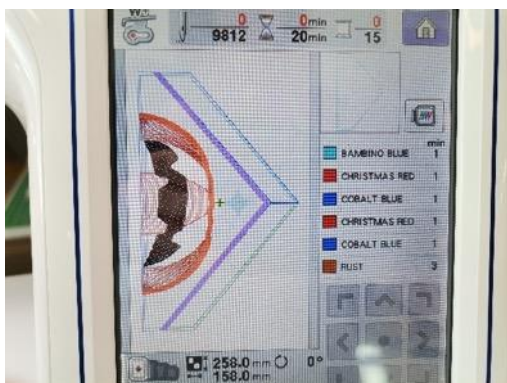

STEP 1 Place **Batting** on top of the hoop. Stitch the batting down. Remove the hoop from your machine and trim the batting about 1-2mm from the stitching.



STEPS 2 & 3 Repeat the applique process for the background using **Fabric A**. Trim, leaving the fabric in the seams.



OPTIONAL: STEP 4 Embroider the rays in the background.




STEPS 5 & 6 Repeat the applique process for the pumpkin using **Fabric B**. Trim, leaving the fabric in the seam.



STEPS 7 & 8 Embroider the shading on the pumpkin. Then embroider the satin stitch around the pumpkin.



OPTIONAL: STEP 9 Embroider the face on the pumpkin.

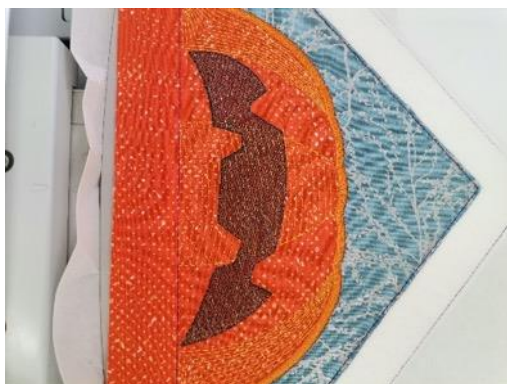

STEPS 10 & 11 Repeat the applique process for the right section of the border using **one piece** of **Fabric C**. Trim. Leave the fabric in the seams.






STEP 12 Using the straight edge of the right section of border as a placement line, place the second piece of **Fabric C**, **wrong side up** crossing the placement line by $\frac{1}{4}$ ", with excess fabric towards the top right hand side of the hoop. Stitch down.



Trim the excess fabric

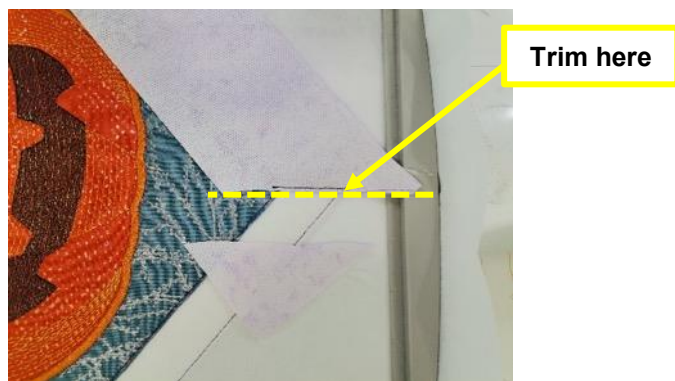

STEP 13 Fold the fabric back towards bottom left hand side of the hoop and stitch down. Trim. Leave the fabric in the seams.





STEP 14 Embroider the satin stitch around the border.



STEPS 15 & 16 Embroider the base colour of the star, then the shading on the star.



Remove from the hoop and trim the seams to about ½ an inch. Hold aside until all your blocks/panels are made.



USING YOUR REGULAR SEWING MACHINE:

JOIN ALL THE PANELS

Lay out your hanger in the correct order, with the long edges of the panels together.

As you can see, we have completed two versions of this hanger. For our assembly, we will be using the colourful pumpkin version.




Place the first two panels **right sides** together.



Pin and sew a half inch seam, sewing just inside the border lines already on the panels.



Open out the seam and iron flat.

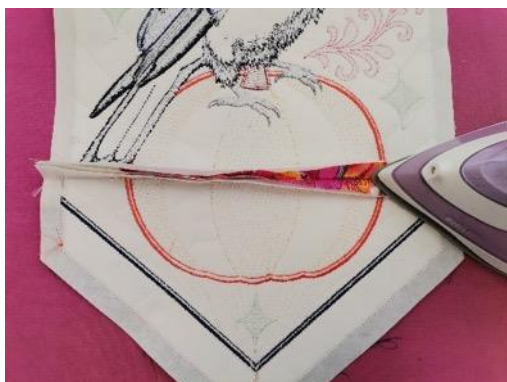

Then continue joining the last panel in the same fashion.



ADD THE LOOPS FOR HANGING

Take out **Fabric D** for the loops and fold the two longer edges widthways. Stitch a ½ inch (12.5mm”) seam to create a tube.



Open the seam, and then using the tip of the iron, press this seam open.



Turn the loop through to the right side and press flat, leaving the joining seam in the middle on the underside of the loop. Edgestitch or topstitch, if desired. Make sure the bobbin is the same colour as your top thread.



Fold in half lengthways and cut. This will give you your two loops. Fold in half lengthways again and iron—clip to secure. Machine baste the ends together.



Pin them both to the hanger. **(We decided to place the loops 1" (2.5cm) from the border stitching of the hanger. This will depend on the type of hanger you are using).** Stay stitch the loops in place.



CUT THE BACKING

Place **Fabric E (backing)** on your table **right side up**. Place your sewn hanger on top of **Fabric E** **right sides** together. Pin together, leaving an opening of about 13cm (5 inches) for turning.



Stitch the seam, sewing just inside the border lines already on the panels, remembering to leave the opening.



Trim the seams to $\frac{1}{4}$ ", and $\frac{1}{2}$ " where the opening is, so it is easier to hand stitch it closed later. Clip the corners for more pointed ones when turned.



Then turn the right way out through the opening. Use a chopstick or That Pink Thang to help push out the corners. Press.



Hand stitch (or use fabric glue) the opening closed. Optional: Stitch in the ditch of the seams to attach the backing.



You have now finished your hanger. Enjoy!

